# INSTRUCTIONS

## My Very Own House™

is suitable for Ages 18 months and up.

#### MADE in USA

MODEL: MH5536

BEFORE USING THIS PRODUCT READ and SAVE THESE INSTRUCTIONS

## **Washable Markers (included)**

 $\triangle$ 

WARNING: CHOKING HAZARD

Markers have small parts and are suitable for children 3 and up.

PARENTS: Large crayons may be used by younger children to decorate house.


### **Helpful Hints:**

When setting up or collapsing the playhouse (as per the directions) it is best to gradually fold (or unfold) each section uniformly to prevent ripping or tearing.

<u>Chimney</u> - The chimney(s) may not stay square after the first expansion due to the "memory" of the cardboard. To remedy this simply expand the chimney and then collapse it in the opposite direction until flat. Firmly squeeze along the folds until the chimney will stay relatively flat. After this, setup the chimney as per Assembly Instructions Steps K, L & M.

<u>Enhanced Durability</u> - We recommend reenforcing the bottom flaps (shown in Step B) with 2 inch wide "packing tape" (available at most office supply or general merchandise retail stores). Apply the tape along the length of the bottom flap, then fold the remaining part of the 2 inch tape width around the edge of the flap. Make sure to tape both sides of the flaps.

To <u>setup for play</u> or <u>collapse for storage</u>, follow the instructions printed on the playhouse.

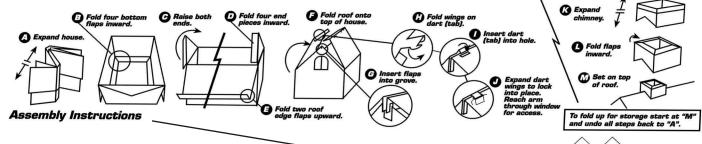

#### **Washable Markers:**

Carefully read all information included in the marker case.

These markers will not wash-off the playhouse.

Washable Markers wash from skin, most children clothing and many non-porous surfaces. Wash clothing immediately in hot wash cycle. Do not use pre-wash or chlorine bleach. Repeat laundering may be required. Keep away from draperies, wallpaper, painted walls, finished and unfinished wood, vinyl, carpeting, porous surfaces and other materials that cannot be laundered. Not intended for use on silk fabric.

